

Twin-spot light

Data sheet

For Series: OT-ECL01-LF



OTC IND CO., LTD

TEL: 0086-575-82913009 | Website: www.otcenterprise.com | Email: info@otcind.net



Dear partners,

* Thanks for Choosing OTC emergency lamp for your projects.

OTC always pursue high quality, steady quality products, competitive price and one-stop customer service, and offer enjoyable installation experience.

* All the OTC bulkheads with 5 years quality guarantee . If any doubts/ questions, please contact OTC project support team directly by email support@otcind.net . You will get solutions in 7~24 hours rapidly.

Contents

1 Security realated information	2
2 Packing list	2
3 Basic Parameters	3
4 General construction	4
5 Maintained & non-maintained changeover	5
6 Emergency function	6
7 Self & remote test system	7
8 Emergency controll logic	8
9 Installation guide	9
10 EM inspection record table	10
11 Cheap solution DIY	11

1 Security related information

- Installation should be carried out in accordance with the latest edition of the I.E.E. Wiring regulations and taking into consideration the latest building regulations.
- Ensure that all electrical connections are tight with no loose strands, including factory made connections.
- Ensure there is adequate free air circulation of at least 100mm around the luminaire. It is the installer's responsibility to consider fire risk and take appropriate precautions.
- A separate enclosure may be required if this unit is to be used in dusty and wet environments.

Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations . The guarantee is also invalidated if the luminaire has been I.R. tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

2 Packing list



The Lamp *1



Installation pack *1



User manual *1




Remote controller *1
Optional, -RST only


3 Basic Parameters

Model	Art Nr. OT-ECL-LF	
	ST	RST
Material	100% Polycarbonate body	
Dimension	274*274*49mm	
LED Chips	2*7 pcs SMD2835	
Color Rendering Index	>80	
Degree of protection	IP20	
Input Voltage	AC200-240V 50/60HZ	
Charging power	3.0W	
Power factor	>0.5	
LED lifespan	50,000 hrs	
EM mode	Non -maintained ①	
Standard	IEC60598-2-22:2021	
Luminous Flux	800Lm	
Discharge power	6W (1A each head)	
Emergency Pack	3.2V 8.0Ah 2*26650 LiFePO4 pack	
Emergency time	3 Hours	
Emergency change over	<0.5S	
Test	Manual + Self test	Manual + Self + Remote test
Charging indicator	Green	Green
Faulty indicator	Red	Red
Lamp faulty indicator	2 pieces separately	


PS ①: It can update to Maintained & non-maintained in one design.

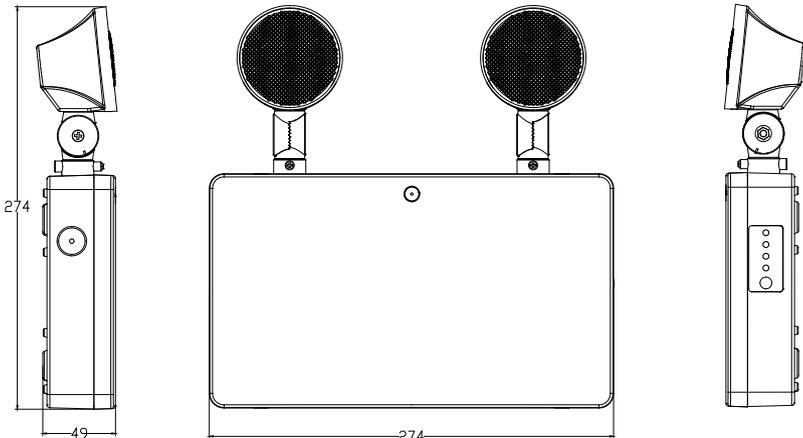

4 General construction

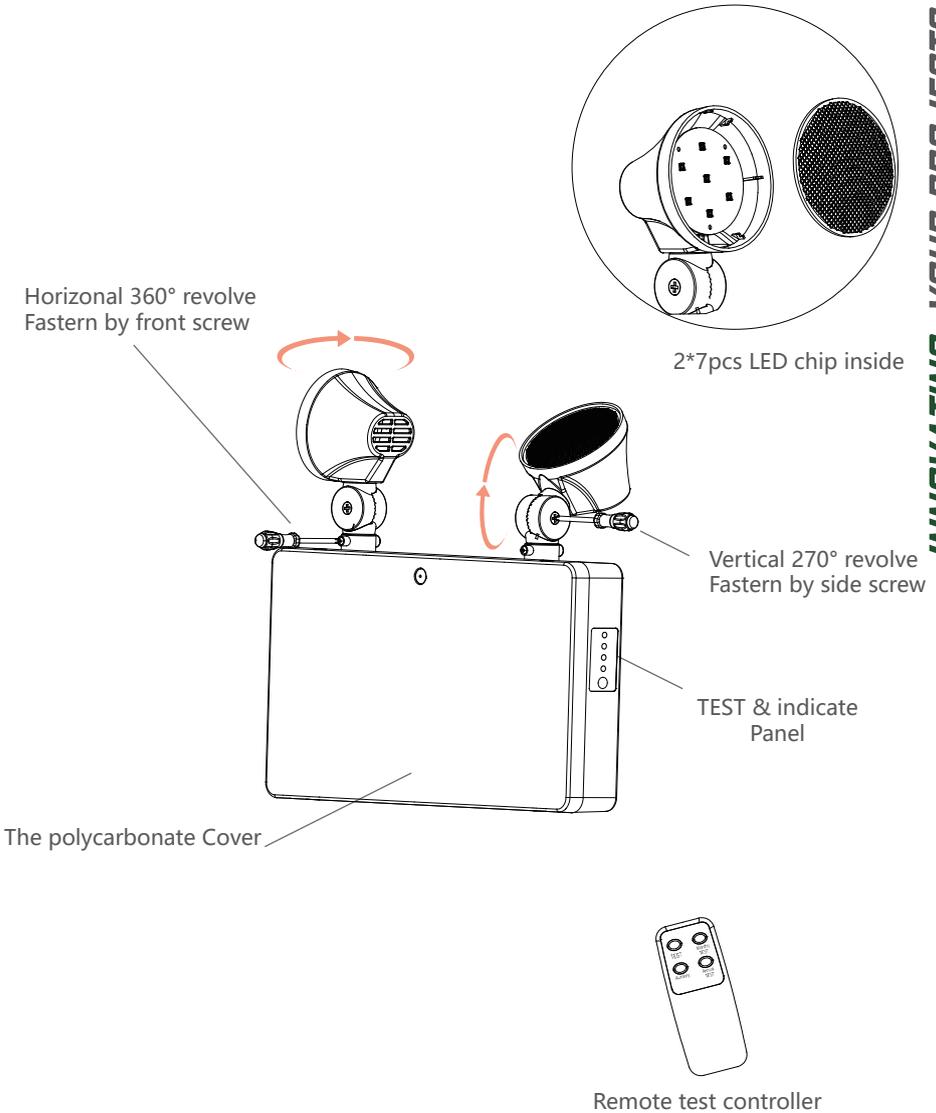

5 Inner construction

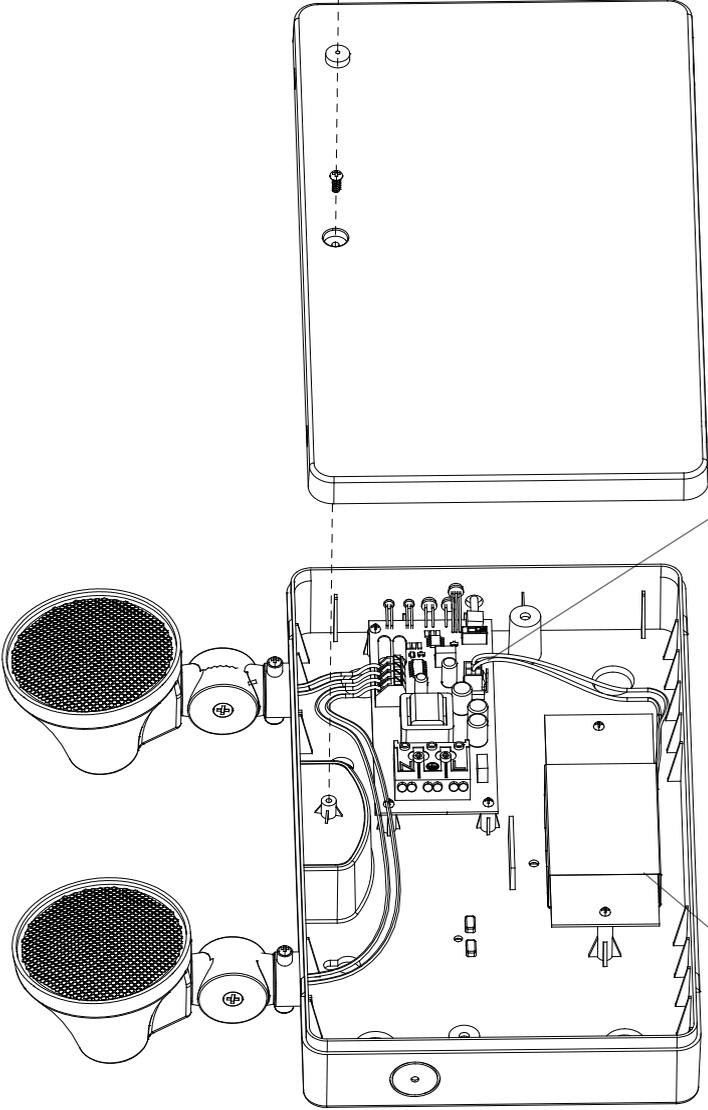

Core control PCB

3.2V 8.0Ah*26650 LiFePO4 pack

6 Emergency function


Emergency Technical Data	
Battery Type	3.2V 8.0Ah LiFePO4
Battery Charging	400mA, Charging >90% in 24hours
Discharging	2000mA,>3hours autonomy time
Test Button	Included
Self-test	Included
Charging Indicator	Green LED
Faulty Indicator	RED LED
Remote test	Included
Standard	IEC60598-2-22:2021

ADDITIONAL INFORMATION - COMPONENT REPLACEMENT

- The luminaire contains no user replaceable components other than the battery pack contained in emergency versions.
- The battery has a 4 year service life provided it is operated and maintained by regular testing, as detailed in this Usermanual. Failure to maintain or change the battery may result in reduced duration in emergency mode.

Emergency function test before installation

1. Connect the AC cable according to the Dia 1. Keep the Switch Live off, and battery plugged on.
(The green charging indicator on, Faulty indicator off)
2. Press the test button, The charging indicator off, and emergency function actived
3. Unplugged the battery, charging indicator OFF, the faulty indicator flash in 1HZ.

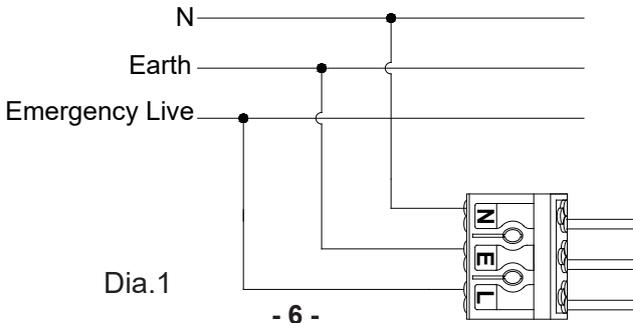

7 Self & remote test system

7.1 Testing (If no failure)

7.1.1. Manual function test.

Active the ④ test button.
or press “TEST” switch on controller.

- a) The ② Charging indicator OFF.
- b) The Emergency function ON.
- c) The test will cut off the mains

7.1.2 Monthly test.


Active the ④ test button for 5 second;
or press the “Monthly TEST” switch on controller;
or the lamp installed every 30 days.

- a) The ② Charging indicator will flash in 1HZ for 128s;
- b) The Emergency function ON;
- c) The test finished and back to standby mode.

7.1.3 Annual test.

Active the ④ test button for 7 second;
or press the “Annual TEST switch on controller;
or the lamp installed every 180 days.

- a) The ② Charging indicator will flash in 2HZ for 3hours;
- b) The charging will be cut off & emergency function ON 3hours;
- c) The lamp back to standby mode after test.

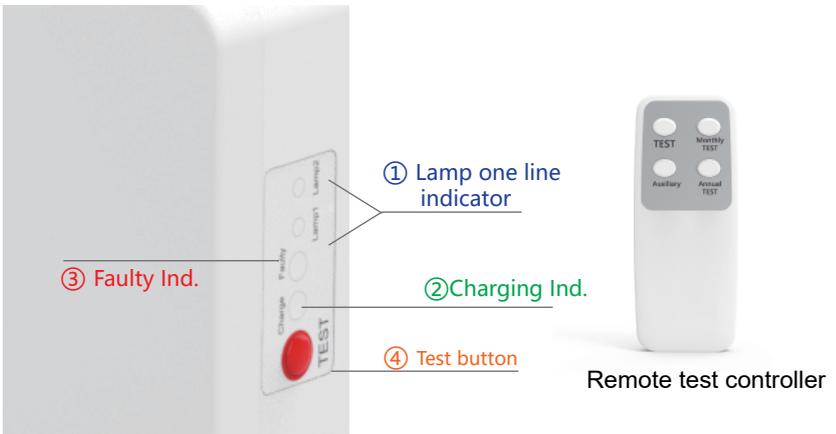

7.2 Testing (If any failure)

- 7.2.1 Battery failure: 
 Monitored constantly. The ③ faulty indicator will flash in 1 Hz if the battery failure any time.
- 7.2.2 LED load failure: 
 Monitored constantly. The ① Lamp one line indicator will turn off if the corresponding LED lamp do not work.
- 7.2.3 Duration failure: 
 Only in Annual self-test. The ③ faulty indicator will turn on constantly if the Battery can not last 3 hours

8 Emergency control logic

The emergency function control logic

Operation	Charging indicator		Faulty Indicator (RED)		Emergency LED		Emergency LED	
	1 S	1 S	1 S	1 S	1 S	1 S	1 S	1 S
Normal charging			OFF		Constantly on		OFF	
Normal full charged	Constantly on		OFF		Constantly on		OFF	
Normal AC Failure	OFF		OFF		Constantly on		Constantly on	
Manual test	OFF		OFF		Constantly on		Constantly on	
Monthly self-test			OFF		Constantly on		Constantly on	
Annual self-test					OFF		Constantly on	
Battery circuit failure	OFF				Constantly on		OFF	
Light source failure	Constantly on						OFF	
Duration test failure	Constantly on		Constantly on		Constantly on		OFF	



Before



After

No Key switch, No Harry, No ladders
 Safe / Easy / Convenient

1. All OTC LED emergency light are designed for projects. Only qualified electrician can install or maintain it.
2. The mains have to be off during the installation or maintenance.
3. Keep the product far from heat sources and in a well ventilated area.



Caution

	<ol style="list-style-type: none"> 1. Mains OFF 2. Install the base on to the wall. 	<p>STEP 1</p>
	<ol style="list-style-type: none"> 1. Wiring the power cable by M20 gland 2. Battery plug in 	<p>STEP 2</p>
	<ol style="list-style-type: none"> 1. Install the Cap 2. AC supply on 3. Set the twin-head to right direction 	<p>STEP 3</p>

10 EM inspection record table



Luminaire emergency inspection record

month	Test	First Year		Second Year		Third Year		Fourth Year		Fifth Year	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	Functional										
2	Functional										
3	Functional										
4	Functional										
5	Functional										
6	1 hour										
7	Functional										
8	Functional										
9	Functional										
10	Functional										
11	Functional										
12	3 hours										

Installed By: Luminaire NO.:
 Installed Date:
 Luminaire Locaton: Contact details:

