

4-in-1 Evacuation sign

Data Sheet

For Series: OT-ES9119 ST/RST



OTC IND CO., LTD

TEL: 0086-575-82913009 | Website: www.otcenterprise.com | Email: info@otcind.net



Dear partners,

* Thanks for Choosing OTC LED emergency products for your projects.

OTC always pursue high quality, steady quality products, competitive price and one-stop customer service, and offer enjoyable installation experience.

* All the OTC emergency lamp with 5 years quality guarantee (Battery 3 years) . If any doubts/ questions, please contact OTC project support team directly by email support@otcind.net . You will get solutions in 7~24 hours rapidly.

Contents

1 Security realated information	2
2 Packing list	2
3 Basic Parameters	3
4 General construction	4
4# Rest mode and storage	4
5 Emergency function & Wiring	5
6 Installation guide	6
7 EM inspection record table	9
8 Cheap solutions DIY	10

1 Security related information

- Installation should be carried out in accordance with the latest edition of the I.E.E. Wiring regulations and taking into consideration the latest building regulations.
- Ensure that all electrical connections are tight with no loose strands, including factory made connections.
- Ensure there is adequate free air circulation of at least 100mm around the luminaire. It is the installer's responsibility to consider fire risk and take appropriate precautions.
- A separate enclosure may be required if this unit is to be used in dusty and wet environments.

Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations . The guarantee is also invalidated if the luminaire has been I.R. tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

2 Packing list

1m hanging pack

OT- ES9119 *1

The Cancopy*1 (Optional)

4 pieces pictograms

4*30 2pcs

Installation accessories

Remote controller *1 (Optional)

Usermanual

Cable Protection ring *1

Side wall mounting pack


Cable fasten set *1

4*25 1pc


4*8 1pc

3 Basic Parameters

Model	Art Nr. OT-ES9119	
	ES9119-ST	ES9119-RST
Material	Polycarbonate + PMMA	
LED Chips	22pcs SMD 4014	
Color Rendering Index	>80	
Degree of protection	IP20	
Input Voltage	AC200-240V 50/60HZ	
Input power	2.5 W if maintained / 1.5 W if non-maintained	
Power factor	>0.5	
Emergency changeover	<0.5S	
Emergency mode	Maintained & non-maintained (See page 7)	
LED lifespan	50,000 hrs	
Guarantee	5 years (Battery 3 years)	
Emergency Standard	60598-2-22:2021	
Legend standard	ISO7010:2019	
The Photonic	ISO 3864-4:2011 / EN 1838-2013	
Emergency Pack	3.6V 0.6Ah	
Emergency time	3 Hours	
Test	Manual test	Manual + self + remote test
Charging indicator	Green	
Faulty indicator	Red	
Charging details	60mA, Full charged in 24 hours	
Disharging details	150mA, 3 hours emergency time	
Luminous Flux(Mains)	60LM	
Luminous Flux(EM)	60LM	

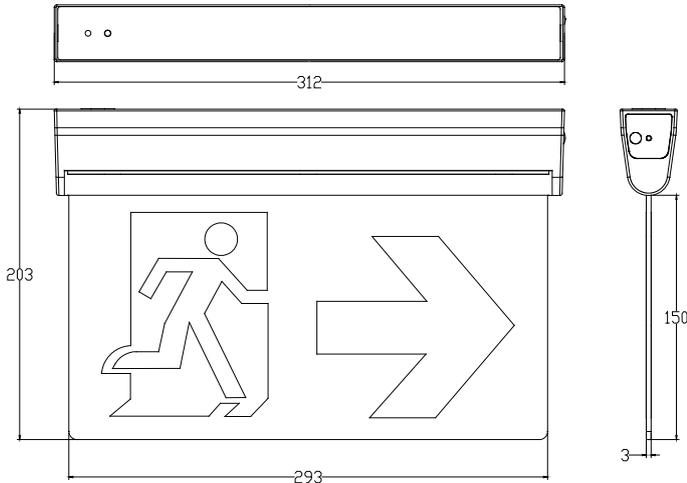

4 General construction

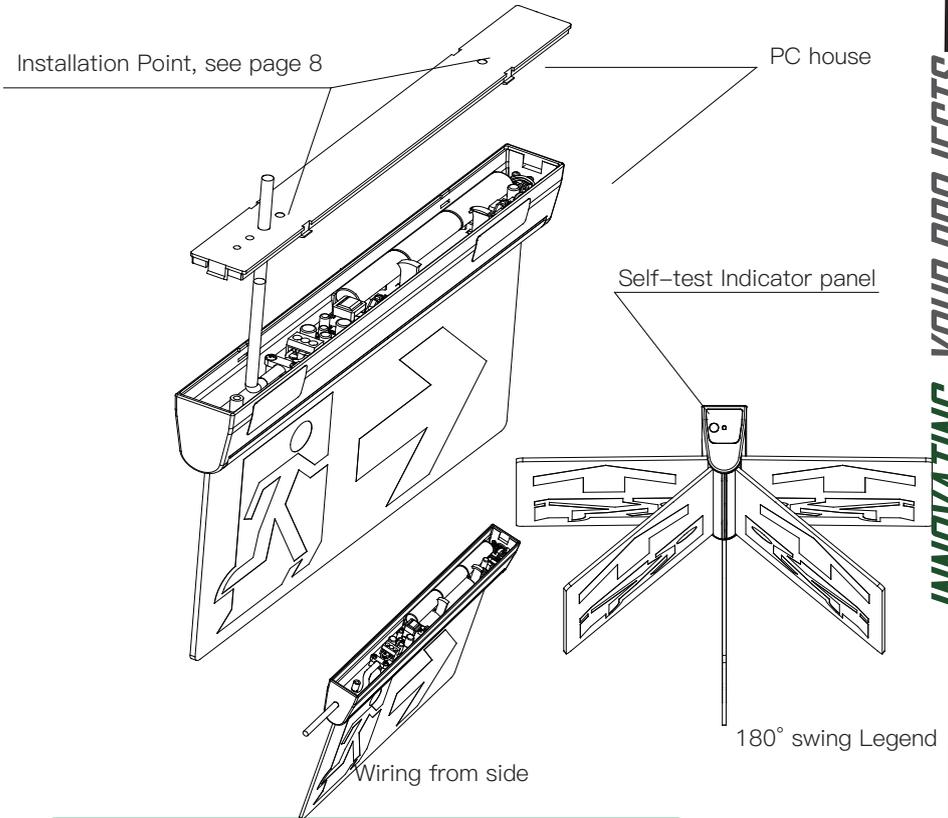

4# . Rest mode & storage

4#.1 This luminaire combined rest mode.

When the AC supply failure / cut down. The EM LED on.

- If the battery over discharged, The luminaire will changeover rest mode automatically.
- You can click the ④ test button. and the luminaire also can changeove rest mode.

4#.2 Storage & transportation

- Make sure the luminaire in rest mode
- Keep the storage temperature 0~30°C
- Keep away from inflammables; keep dry & ventilation.

5 Self / remote test system(ES809ST &ES809RST only)

5.1 Testing (If no failure)

5.1.1. Manual function test.

ES9119–ST/ES9119–RST: Active the ④ test button.

ES9119RST:Press “TEST” switch on controller.

- a) The ② Charging indicator OFF.
- b) The Emergency function ON.
- c) The test will cut off the mains

5.1.2 Monthly test.


ES9119–ST/ES9119–RST: Active the ④test button for 5 second;
 ES89119–RST: Press the “Monthly TEST” switch on controller;
 or the lamp installed every 30 days.

- a) The ② Charging indicator will flash in 1Hz for 128s;
- b) The Emergency function ON;
- c) The test finished and back to standby mode.

5.1.3 Annual test.

ES9119–ST/ES9119–RST: Active the ④test button for 7 second;
 ES9119RST: Press the “Annual TEST switch on controller;
 or the lamp installed every 180 days.

- a) The ② Charging indicator will flash in 2Hz for 3hours;
- b) The charging will be cut off & emergency function ON 3hours;
- c) The lamp back to standby mode after test.

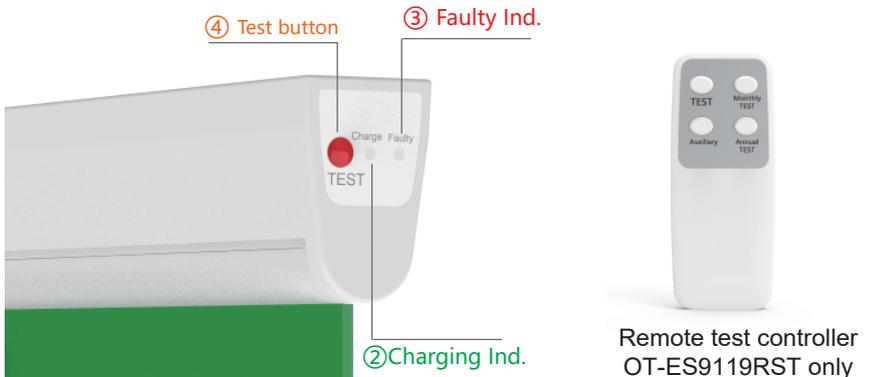

5.2 Testing (If any failure, Only ES9119-ST/RST)

- 5.2.1 Battery failure:  Monitored constantly. The ③ faulty indicator will flash in 1 Hz if the battery failure any time.
- 5.2.2 LED load failure:  If press test button, or the luminary self-monthly test. The ③ faulty indicator will flash in 2 Hz if LED load failure.
- 5.2.3 Duration failure:  Only in Annual self-test. The ③ faulty indicator will turn on constantly if the Battery can not last 3 hours

6 Emergency control logic

The emergency function control logic

Operation	Charging indicator		Faulty Indicator (RED)		Emergency LED		Emergency LED	
	1 S	1 S	1 S	1 S	1 S	1 S	1 S	1 S
Normal charging	Constantly on		OFF		Constantly on		OFF	
Normal AC Failure	OFF		OFF		Constantly on		Constantly on	
Manual test	OFF		OFF		Constantly on		Constantly on	
Monthly self-test			OFF		Constantly on		Constantly on	
Annual self-test					OFF		Constantly on	
Battery circuit failure	OFF				Constantly on		OFF	
Light source failure	Constantly on						OFF	
Duration test failure	Constantly on		Constantly on		Constantly on		OFF	



Before



After

No Key switch, No Harry, No ladders
Safe / Easy / Convenient

7 Emergency function & Wiring


ADDITIONAL INFORMATION - COMPONENT REPLACEMENT

- The luminaire contains no user replaceable components other than the battery pack contained in emergency versions.
- The battery has a 4 year service life provided it is operated and maintained by regular testing, as detailed in this Usermanual. Failure to maintain or change the battery may result in reduced duration in emergency mode.

7.1 Emergency function test before installation

7.1.1. Chose the cable wiring way according page 4.
Connect the AC cable according to the Dia 1.

- The charging indicator on,
- The Faulty indicator off,

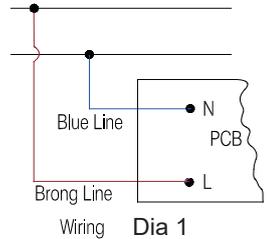

7.1.2. Press the test button, The charging indicator off, and emergency function activated.


7.1.3. Cut off the AC power supply, The Charging indicator off and emergency function on.

7.2 Maintained & non-maintained mode changeover

a) The OT-ES9119-ST/RST was preset Maintained mode.



Method 2
ES809-RST only

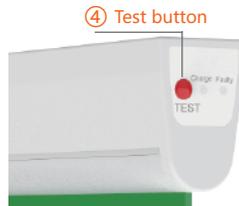

Method 1

Press the ④ test button constantly for 11 seconds

b) AC power on

Method 1: Press the ④ test button constantly for 11 seconds

Method 2: Press the “Auxiliary” switch on remote test controller for 6 seconds (ES9119-RST only).

The OT-ES9119 will change the Emergency work mode.

8 Installation guide

 


Caution


1. All OTC emergency lights are designed for projects. Only qualified electrician can install or maintain it.
2. The mains have to be off during the installation or maintenance.
3. Keep the product far from heat sources and in a well ventilated area.



Installation pack

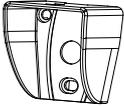

The Side-Wall-mounting Accessory

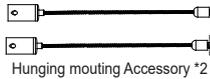 

Hanging mounting Accessory *2



Alligator Anchor*2





4*30 Screws * 2




4*8 screws*1
4*25 screws*1

Install the PVC Legend

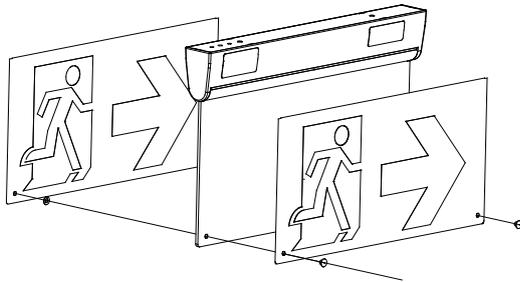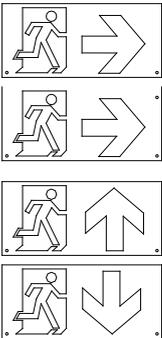

- 1) Chose the right PVC legend.
- 2) Install the legend by clips.

Installation 1: Ceiling mounting

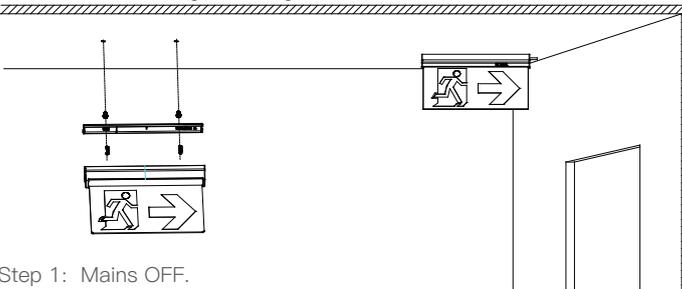

Ceiling installation device

Step 1: Mains OFF.


Step 2: Install the base on to the ceiling by 2 pieces 4*30 screws

Step 3: Wiring The cable and testing accoring Page 7

Step 4: Fix the sign on the ceiling


Step 5: Mains ON

Installation 2: Side wall mounting

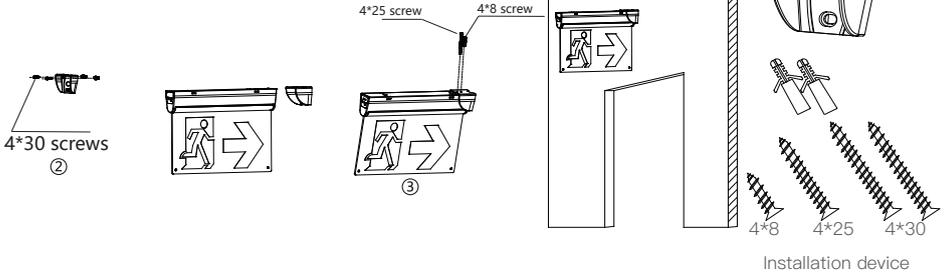


- Step 1: Mains OFF.
- Step 2: Install the wall mounting accessory on to ES9921
- Step 3: Fix the sign on the wall
- Step 4: Wiring and testing accoring Page 7 (From side recommend)
- Step 5: Mains ON

Installation 3: Wall mounting

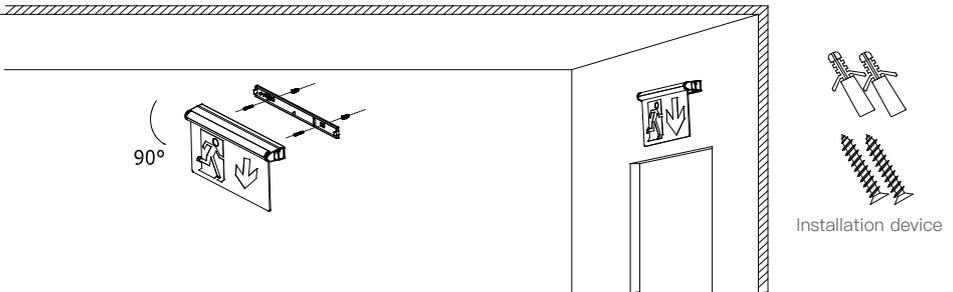

- Step 1: Mains OFF.
- Step 2: Install the base on to the wall by 2 pcs 4*30 screws
- Step 3: Fix the lamp on to the wall.
- Step 4: Wiring and testing accoring Page 7 (From side recommend)
- Step 5: Mains ON

Installation 4: Hanging

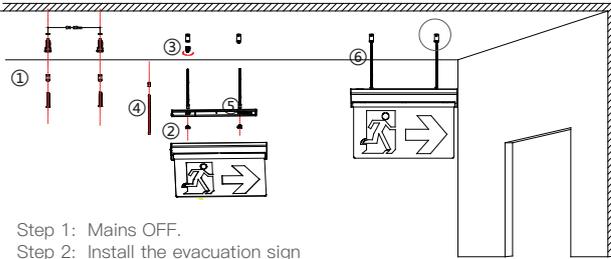

Step 1: Mains OFF.

Step 2: Install the evacuation sign


- ① Install the a) by screws, distance 180–200mm recommend.
- ② Install e) into the base of sign.
- ③ Install b) into a) by screwing.
- ④ Insert the c) string into d) from no stopper side.
- ⑤ Install c)+d) on to e) according the drawing by screwing.
- ⑥ Insert the string into b) set the length according Pic8.1.

Step 3: Wiring and testing according Page 7

Step 4: Mains ON




Pic8.1

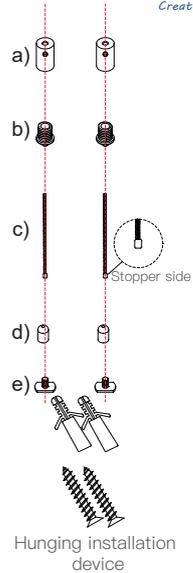

Hanging installation device

Installation 5: Hanging with canopy

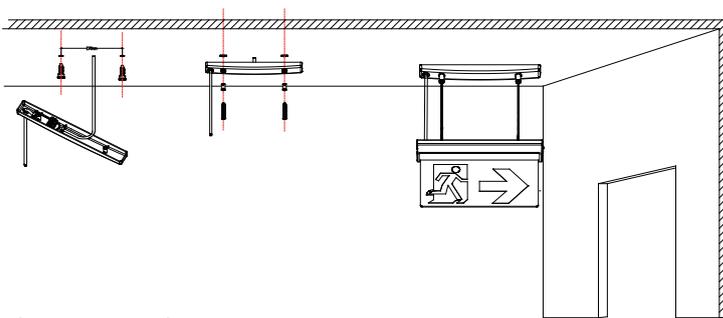

Step 1: Mains OFF.

Step 2: Connect the power cable to canopy.

Step 3: Fix the canopy together with a) of hanging accessory to the ceiling by 4*45mm screws

Step 4: Install the ES9119 same as ↑ Installation 4 ↑.

Step 5: Wiring and test according page 7

Step 6: Mains ON



Hanging installation device



Canopy (Optional Device)

9 EM inspection record table

Luminaire emergency inspection record

month	Test	First Year		Second Year		Third Year		Fourth Year		Fifth Year	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	Functional										
2	Functional										
3	Functional										
4	Functional										
5	Functional										
6	1 hour										
7	Functional										
8	Functional										
9	Functional										
10	Functional										
11	Functional										
12	3 hours										

Installed By: Installed Date: Luminaire NO.:

Luminaire Location: Contact details:



10 Cheap solutions DIY



WARNING

1. All OTC emergency lights are designed according to 60598-1 and 60598-2-22:2014 strictly. There is no trouble if you chose OTC products to bid projects, including project acceptance, monthly, annual inspections.

2. If you just need sell them online or install in your home & there is no professional project acceptance inspection, you can chose some cheaper solutions.

NO.	DIY Items	OTC default Solutions	Cheaper solutions	Dis-advantages
1	MOQ	No MOQ, 1pcs available	1000Pcs	
2	Material of house	PC Plastic	ABS	Not fire resist
3	Battery pack	3.6V 0.6Ah Ni-Cd	3.7V Li-ion	1 years guarantee for Li-ion
4	EM driver	Isolated	CBB solution	Can not IEC61347-2-7 compliant
5	Lumen output	Constant brightness	Bright at beginning Waker by the end	Can not IEC60598-2-22:2014, 22.17.1 compliant
6	Duration time	180mins	90mins or others	According local fire department requests
7	Installation pack	Installation pack in Page2	Only required installation facilities	Not recommend if sell online.

OTC only guarantee the EM function of luminaire if DIY !

Please check the requests/standards with local fire department before making decision.