Twin-spot light

Data sheet

For Series: OT-ECL02





OTC IND CO., LTD

TEL: 0086-575-82913009| Website: www.otcenterprise.com | Email: info@otcind.net

CE RoHS

INNOVATING YOUR PROJECTS

Original technology
Creating the life

Dear partners,
* Thanks for Choosing OTC emegency lamp for your projects.

OTC always pursue high quality, steady quality products, competitive price and one-stop customer service, and offer enjoyable installation experience.

* All the OTC emergency light with 5 years quality guarantee (Battery 3 years). If any doubts/ questions, please contact OTC project support team directly by email support@otcind.net . You will get solutions in 7~24 hours rapidly.

Contents

1 Security realated information 2

2 Packing list 2

3 Basic Parameters 3

4 General construction 4

5 Emergency function 5

6 Self & remote test system 6

7 Emergency controll logic 7

8 Installation guide 8

1 Security related information

• Installation should be carried out in accordance with the latest edition of the I.E.E. Wiring regulations and taking into consideration the latest building regulations.

• Ensure that all electrical connections are tight with no loose strands, including factory made connections.

• Ensure there is adequate free air circulation of at least 100mm around the luminaire. It is the installer's responsibility to consider fire risk and take appropriate precautions.

•A seperate enclosure may be required if this unit is to be used in dusty and wet environments.

Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations . The guarantee is also invalidated if the luminaire has been I.R. tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product.Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.


2 Packing list



The Lamp *1



Installation pack *1

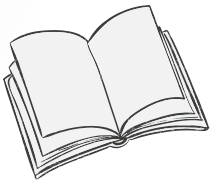

User manual *1




Remote cotroller *1
Optional, -RST only


INNOVATING YOUR PROJECTS

3 Basic Parmeters


Model	Art Nr. OT-ECL02-3/6W	
	ST	RST
Material	100% Polycarbonate body	
Dimension	213*85*44mm	
LED Chips	2*12 pcs SMD2835	
Color Rendering Index	>80	
Degree of protection	IP20	
Input Voltage	AC200-240V 50/60HZ	
Charging power	2.0W	
Power factor	>0.5	
LED lifespan	50,000 hrs	
↓Next are Emergency parameters↓		
EM mode	Non -mtaintained ①	
Standard	IEC60598-2-22:2021	
Item || Battery|| EM Power|| Luminous Flux	3W|| 18650 IFR3.2V 1.6Ah || 1.2W || 160Lm 6W|| 26650 IFR3.2V 4.0Ah || 3.0W || 400Lm	
Emergency time	3 Hours	
Emergency change over	<0.5S	
Test	Manual + Self test	Manual + Self + Remote test
Charging indicator	Green	Green
Faulty indicator	Red	Red


PS ①: It can update to Maintained & non-maintained in one design.

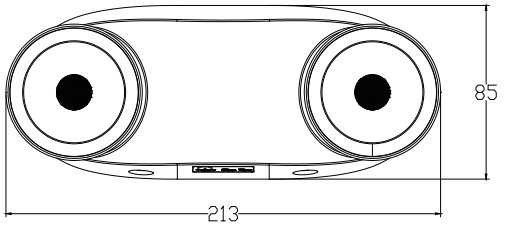



4 General construction

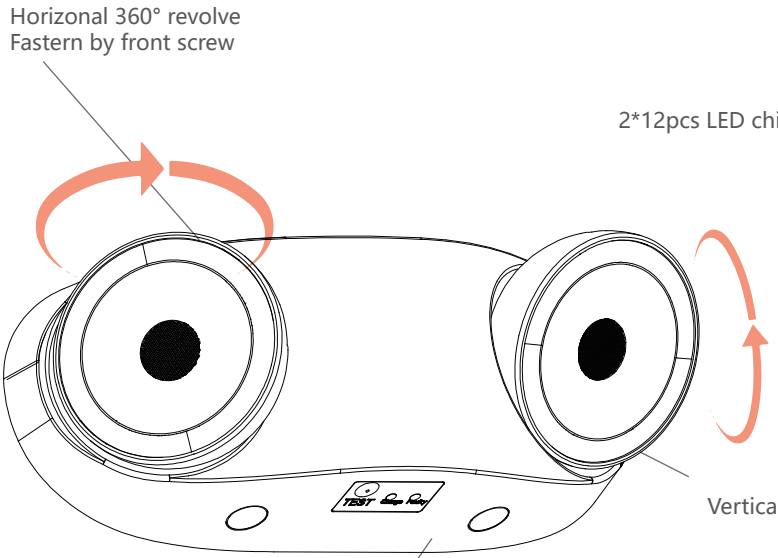



Remote test controller

5 Emergency function

ADDITIONAL INFORMATION -
COMPONENT REPLACEMENT

• The luminaire contains no user replaceable components other than the battery pack contained in emergency versions.

• The battery has a 4 year service life provided it is operatedand & maintained by regular testing, as detailed in this Usermanual. Failure to maintain or change the battery may result in reduced duration in emergency mode.


Emergency function test before installation

1. Connect the AC cable according to the Dia 1.
   Keep battery plugged on.

2. AC Supply on
   The Charing Indicator On, The faulty Indicator Off
   The EM LED OFF .

3. Press the test button, The charging indicator off, and EM LED on.

4. Unplugged the battery and press the test button.
   Charging indicator OFF,
   Faulty indicator flash in 1Hz.

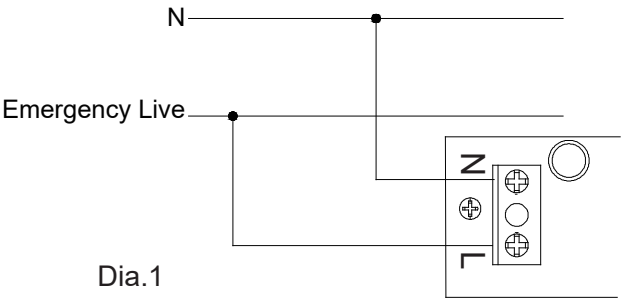

Dia.1

6.1 Testing (If no failure)

6.1.1. Manual function test.
Active the ④ test button.
or press "TEST" switch on controller.


a) The ② Charging indicator OFF.
b) The Emergency function ON.
c) The test will cut off the mains

6.1.2 Monthly test.
Active the ④ test button for 5 second;
or press the "Monthly TEST" switch on controller;
or the lamp installed every 30 days.

a) The ② Charging indicator will flash in 1Hz for 128s;
b) The Emergency function ON;
c) The test finished and back to standby mode.

6.1.3 Annual test.
Active the ④ test button for 7 second;
or press the "Annual TEST switch on controller;
or the lamp installed every 180 days.

a) The ② Charging indicator will flash in 2Hz for 3hours;
b) The charging will be cut off & emergency function ON 3hours;
c) The lamp back to standby mode after test.

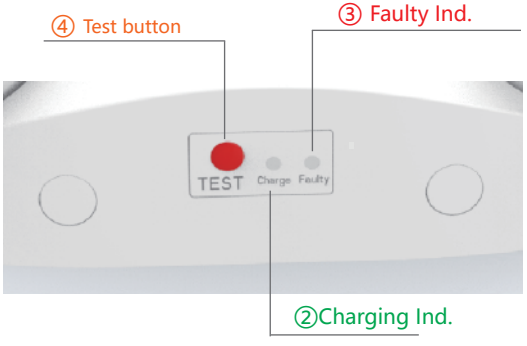



Remote test controller

INNOVATING YOUR PROJECTS

6.2 Testing (If any failure)

6.2.1 Battery failure: ● ● ● ● ●
Monitored constantly. The ③ faulty indicator will flash in 1 Hz if the battery failure any time.

6.2.2 LED load failure: ● ● ● ● ● ● ● ● ● ●
Monitored constantly. The ③ faulty indicator will flash in 2 Hz if the battery failure any time.

6.2.3 Duration failure: ▬▬▬▬▬▬
Only in Annual self-test. The ③ faulty indicator will turn on constantly if the Battery can not last 3 hours

7 Emergency control logic

The emergency function control logic

Operation	Charging indicator		Faulty Indicator (RED)		Emergency LED Maintained mode		Emergency LED Non-Maintained	
Time line (Second)	1 S	1 S	1 S	1 S	1 S	1 S	1 S	1 S
Normal charging	●		OFF		Constantly on		OFF	
Normal full charged	Constantly on		OFF		Constantly on		OFF	
Normal AC Failure	OFF		OFF		Constantly on		Constantly on	
Manual test	OFF		OFF		Constantly on		Constantly on	
Monthly self-test	●	●	OFF		Constantly on		Constantly on	
Annual self-test	● ●	● ●	OFF		Constantly on		Constantly on	
Battery circuit failure	OFF		●	●	Constantly on		OFF	
Light source failure	Constantly on		● ●	● ●	OFF		OFF	
Duration test failure	Constantly on		Constantly on		Constantly on		OFF	



Before




After

No Key switch, No Harry, No ladders
Safe / Easy / Convenient

8 Installation guide


Caution

1. All OTC emergency devices are designed for projects. Only qualified electrician can install or maintain them.
2. The mains have to be off during the installation or maintenance.

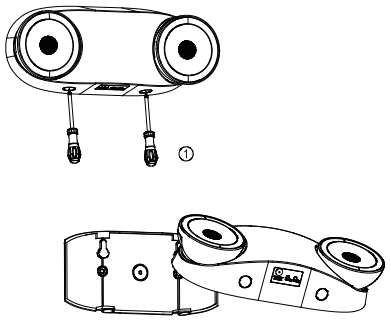

1. Open the diffuser by pushing clips

STEP 1

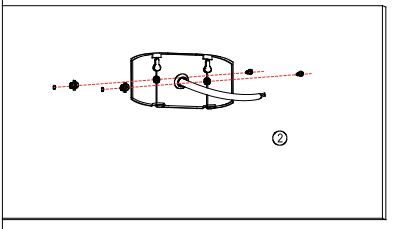


①




1. Mains OFF
2. Power cable in.
3. Install the base on the wall .

STEP 2

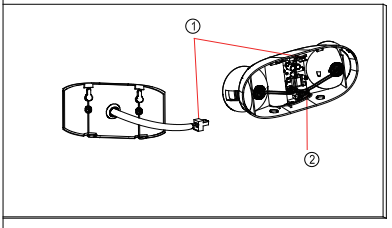

1. Wire the AC powersupply
2. Battery Plug in.

STEP 3

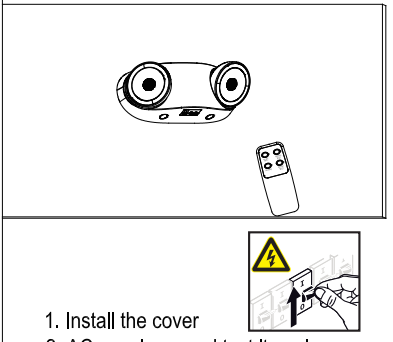

1. Install the cover
2. AC supply on and test it again.
3.Set the direction of the head lamp

STEP 4

INNOVATING YOUR PROJECTS

Luminaire emergency inspection record

month	Test	First Year		Second Year		Third Year		Fourth Year		Fifth Year	
		Signed	Date	Signed	Date	Signed	Date	Signed	Date	Signed	Date
1	Functional										
2	Functional										
3	Functional										
4	Functional										
5	Functional										
6	1 hour										
7	Functional										
8	Functional										
9	Functional										
10	Functional										
11	Functional										
12	3 hours										

Installed By:

.....

Installed Date:

.....

Luminaire NO.:

.....

Luminaire Locaton:

.....

Contact details:

.....